
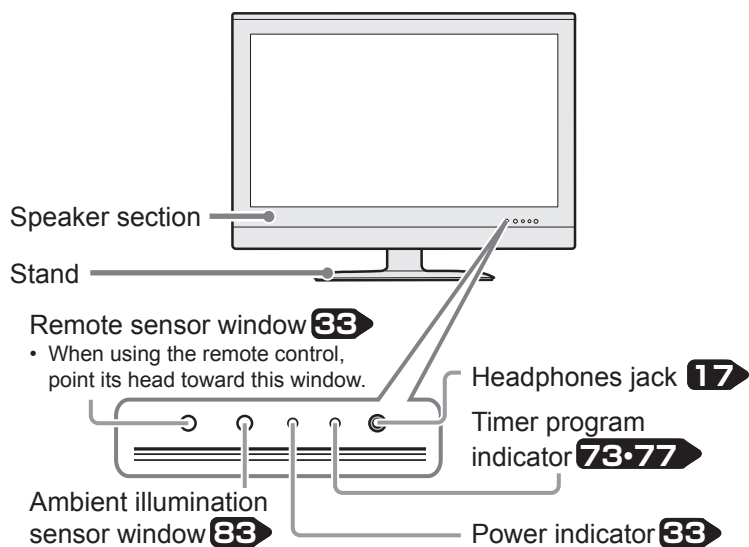


- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.

Front view




Adjusting the LCD panel angle

- The LCD panel can be rotated horizontally up to 15° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.


Attaching the stand

1. Attach the supporting post for the stand unit onto the base as shown below.

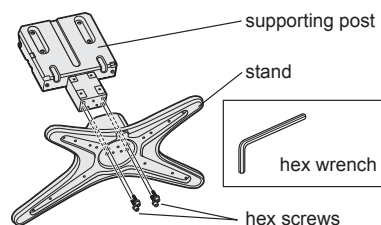


- 2.① Insert the stand into the openings on the bottom on the TV.


- ② Insert and tighten the screws into the 4 holes on the rear of the TV.

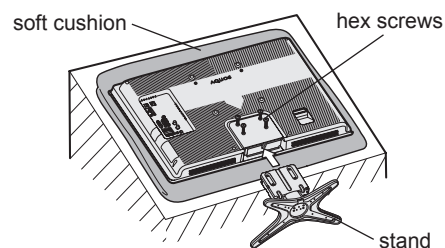

Top view

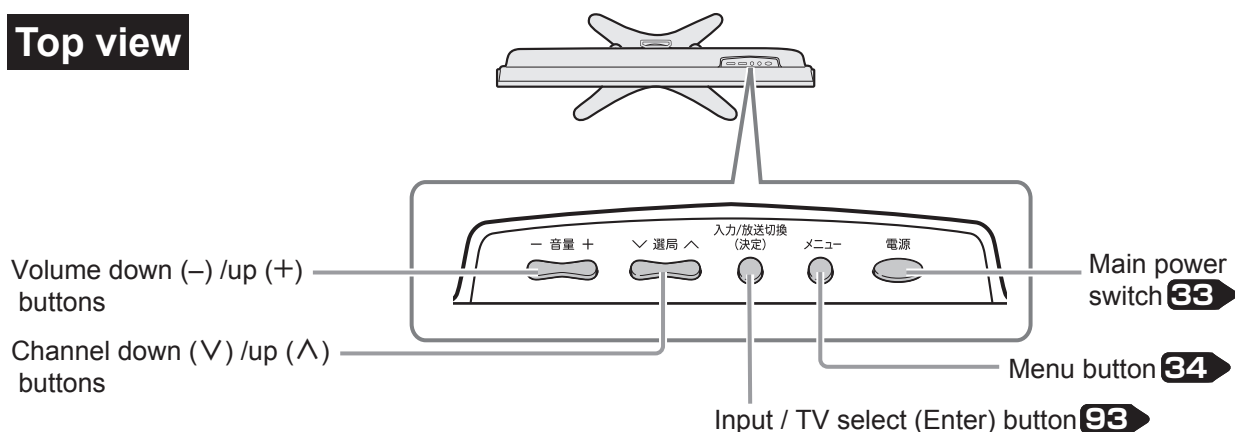


Side view

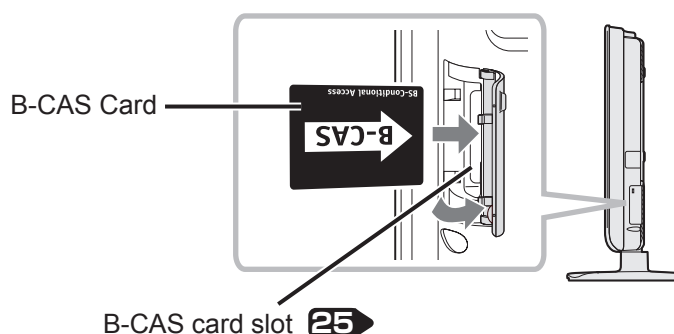

Back view

The illustrations below are those of LC-32E5.
LC-26E5 has the same layout of jacks and terminals as.

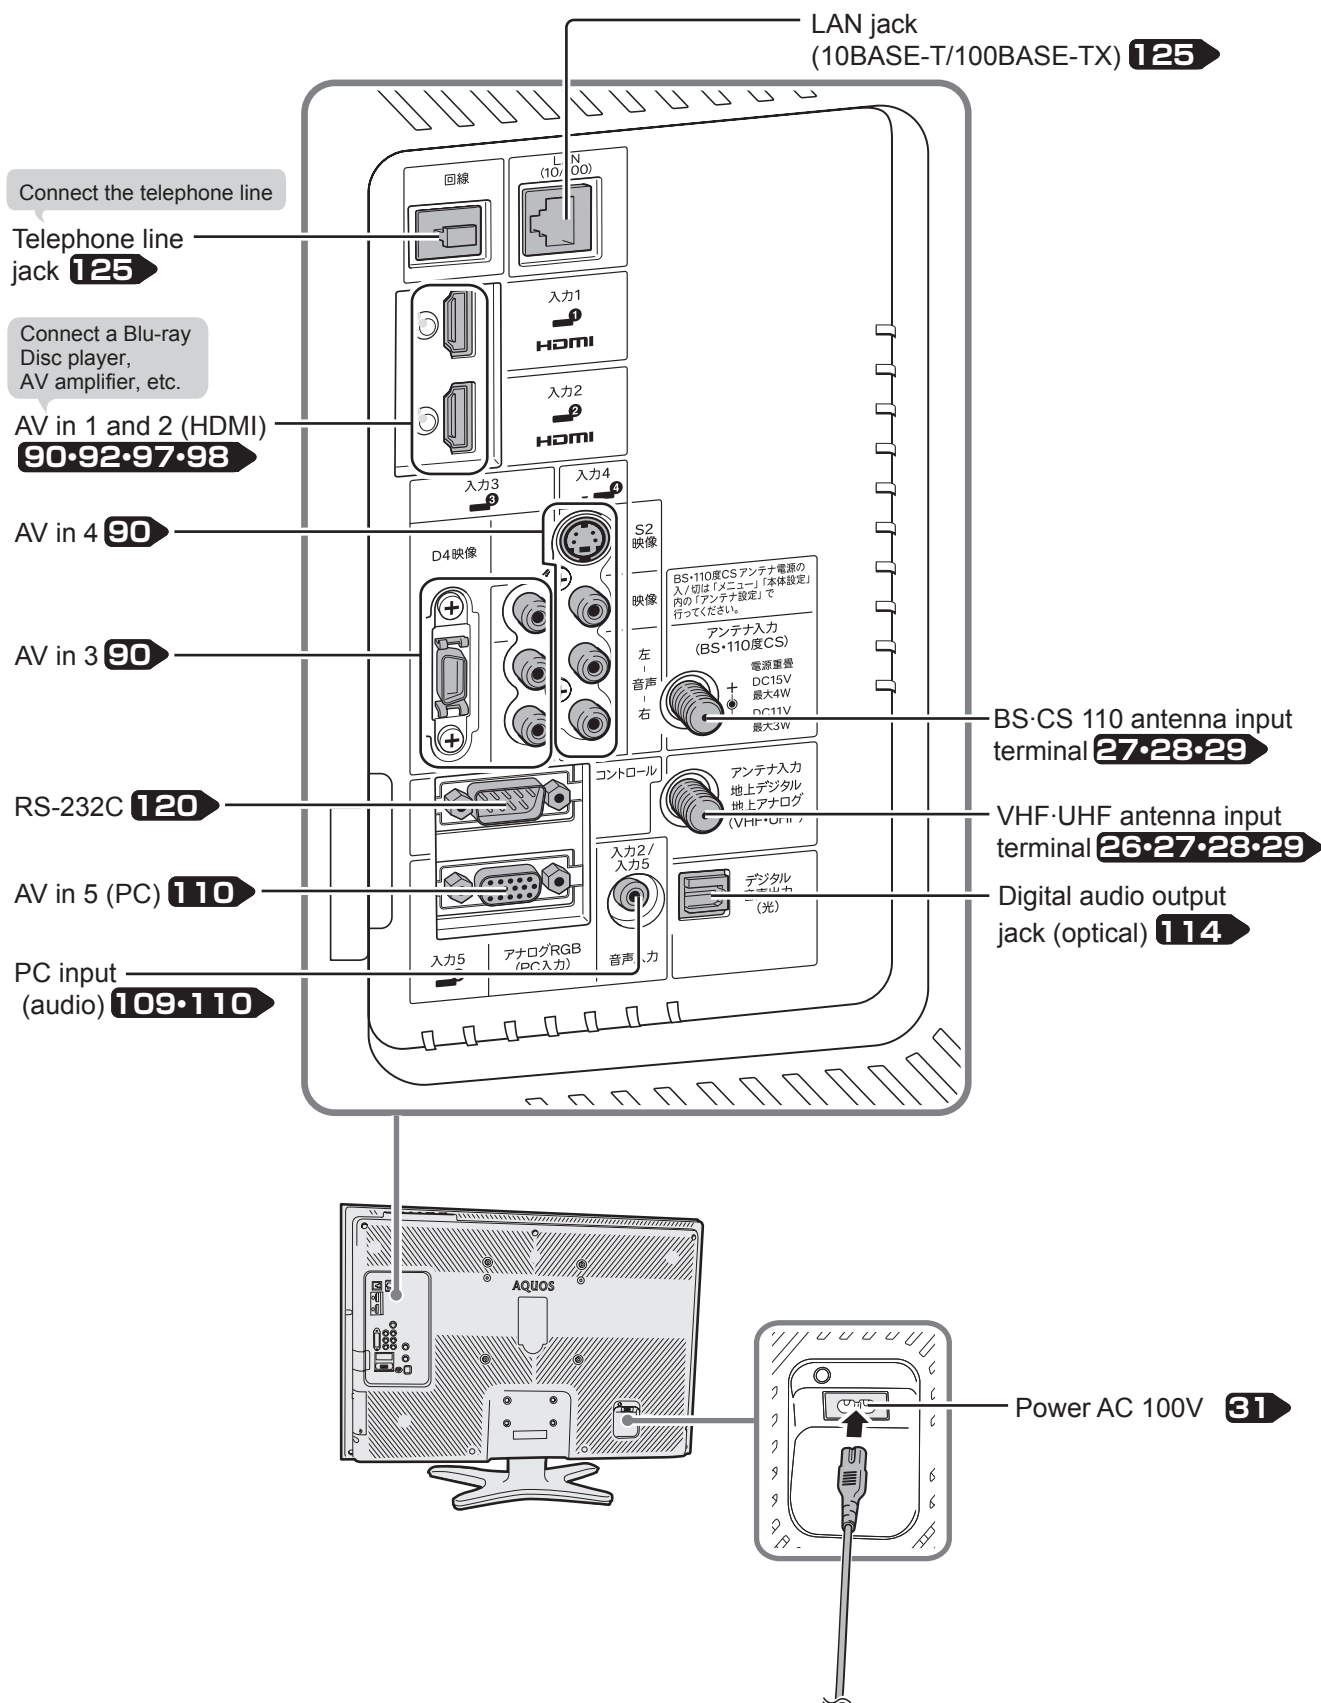

はじめに

準備

番組を見る

レコーダー・プレーヤー！
パソコンなどをつなぐ

ファミリンク
で録画・再生

活用 本機の機能の

寸法図など 故障かな・仕様・

English
Guide

Part Names – Remote Control Unit

Active/Standby **33**

Press to engage the TV set in the active or standby mode.

CATV **63**

When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons 1-10/0)

Channel select **61**

- Press to select a channel.
- Use to input a number for various settings.

地上A Terrestrial analog select **60**

地上D Terrestrial digital select **60**

BS BS select **60**

CS CS select **60**

Select the CS digital channel for the first time. **39**

Linked data broadcast **65・76**

Press to call the data broadcast linked with the current digital TV program.

音量



Volume up (+)/down (-) **61**
Press to adjust the volume.

消音



Mute **61**
Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

番組情報



Program info **76**
Press to display detailed information on the current digital program.

EPG **66・68**

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

Other on-air programs **67**

Press to display the EPG for currently on-air programs only (裏番組).

Finish **34**

Press to finish menu operation, etc.
* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

Screen mode **79・111**

Press to select the desired screen mode.

AV position **AV mode select **81****

Press to select the picture/sound setting that best matches the current program.

Freeze **78**

Press to freeze the picture.

Favorite channel select/register **63**

Press to select a user-registered channel and to turn on/off the favorite channel register/registered channel table screen.

Familink **104・106~108**

Press to operate "Familink" Recorders and AQUOS Surround connected via HDMI cables.

Display **62**

Press to display or turn off the channel call, etc.

オフタイマー



Sleep timer **131**

Press to select the desired remaining time period after which the TV set is automatically turned off and enters the standby mode.

3桁入力



Digital channel number input **63**

Use to select a digital channel by entering the 3-digit channel number.

Familink **104・106~108**

Press to operate "Familink" Recorders and AQUOS Surround connected via HDMI cables.

Channel up (^)/down (v) **61**

Press to select channels in the current network, media and CATV channels in the ascending or descending order.

* CATV channels are factory set to be skipped.

テレビ/データ



Media select **60**

Press to select the desired media (TV or data).

入力切替



Input select **93**

Press to select the desired input.

Menu **34**

Press to display or turn off the menu screen.
*The menus can be displayed in English. See **163** for instructions on how to switch the display language.*

Cursor (up, down, left, right) **34**

Use to select a menu item, column, etc.

Enter/Confirm **34**

Press to confirm a selected setting or menu item.

Return **34**

Press to go back to the previous screen. Press this button instead of the Enter/Confirm (決定) button when you have selected the wrong item or input the wrong number, etc.

Color **68・69**

Use to operate EPGs and data program screens.

Picture select **75**

Press to select the desired picture when watching a digital multi-picture program.

字幕



Caption **75**

Press to display, select, or turn off captions when watching a digital program with captions.

音声切替




Audio select **74・75**

Press to select the desired audio.

To open the cover

Hold the cover by the projections on both sides and lift upwards.

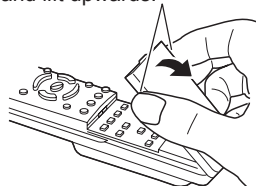

Switching the Display Language to English メニューなどの言語を英語にする

- Using the menu screen, you can switch the on-screen display language to English.

メニューなどの画面表示を英語にすることができます。



お知らせ

誤ってメニューを英語にしてしまったときは


- ・メニューから「Setup」－「言語設定 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

- Press**

1 **メニュー** Display the menu screen.
メニューを表示する
- 2** **決定** Select “本体設定”(Setup)－“Language (言語設定)”.


「本体設定」－「Language (言語設定)」を選ぶ

決定 Enter.
決定する

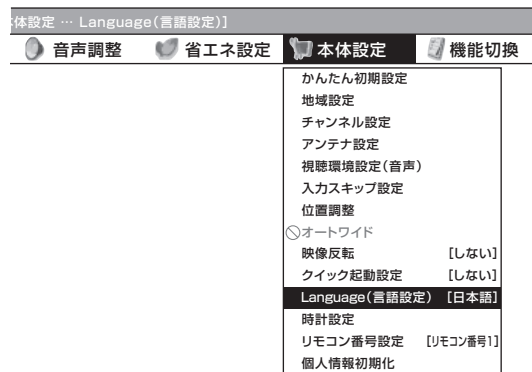

- 3** **決定** Select “English”.
「English」を選ぶ

決定 Enter.
決定する

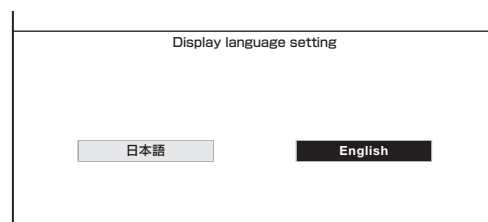

- ・ The menu screen is now displayed in English.
- ・ 画面表示が英語になります。

- 4** **終了** Finish this operation.
終了する

はじめに

準備

番組を見る

レコーダー・プレーヤー・パソコンなどをうまく

ファミリンクで録画・再生

本機の機能の活用

故障かな・仕様・寸法図など

English Guide